


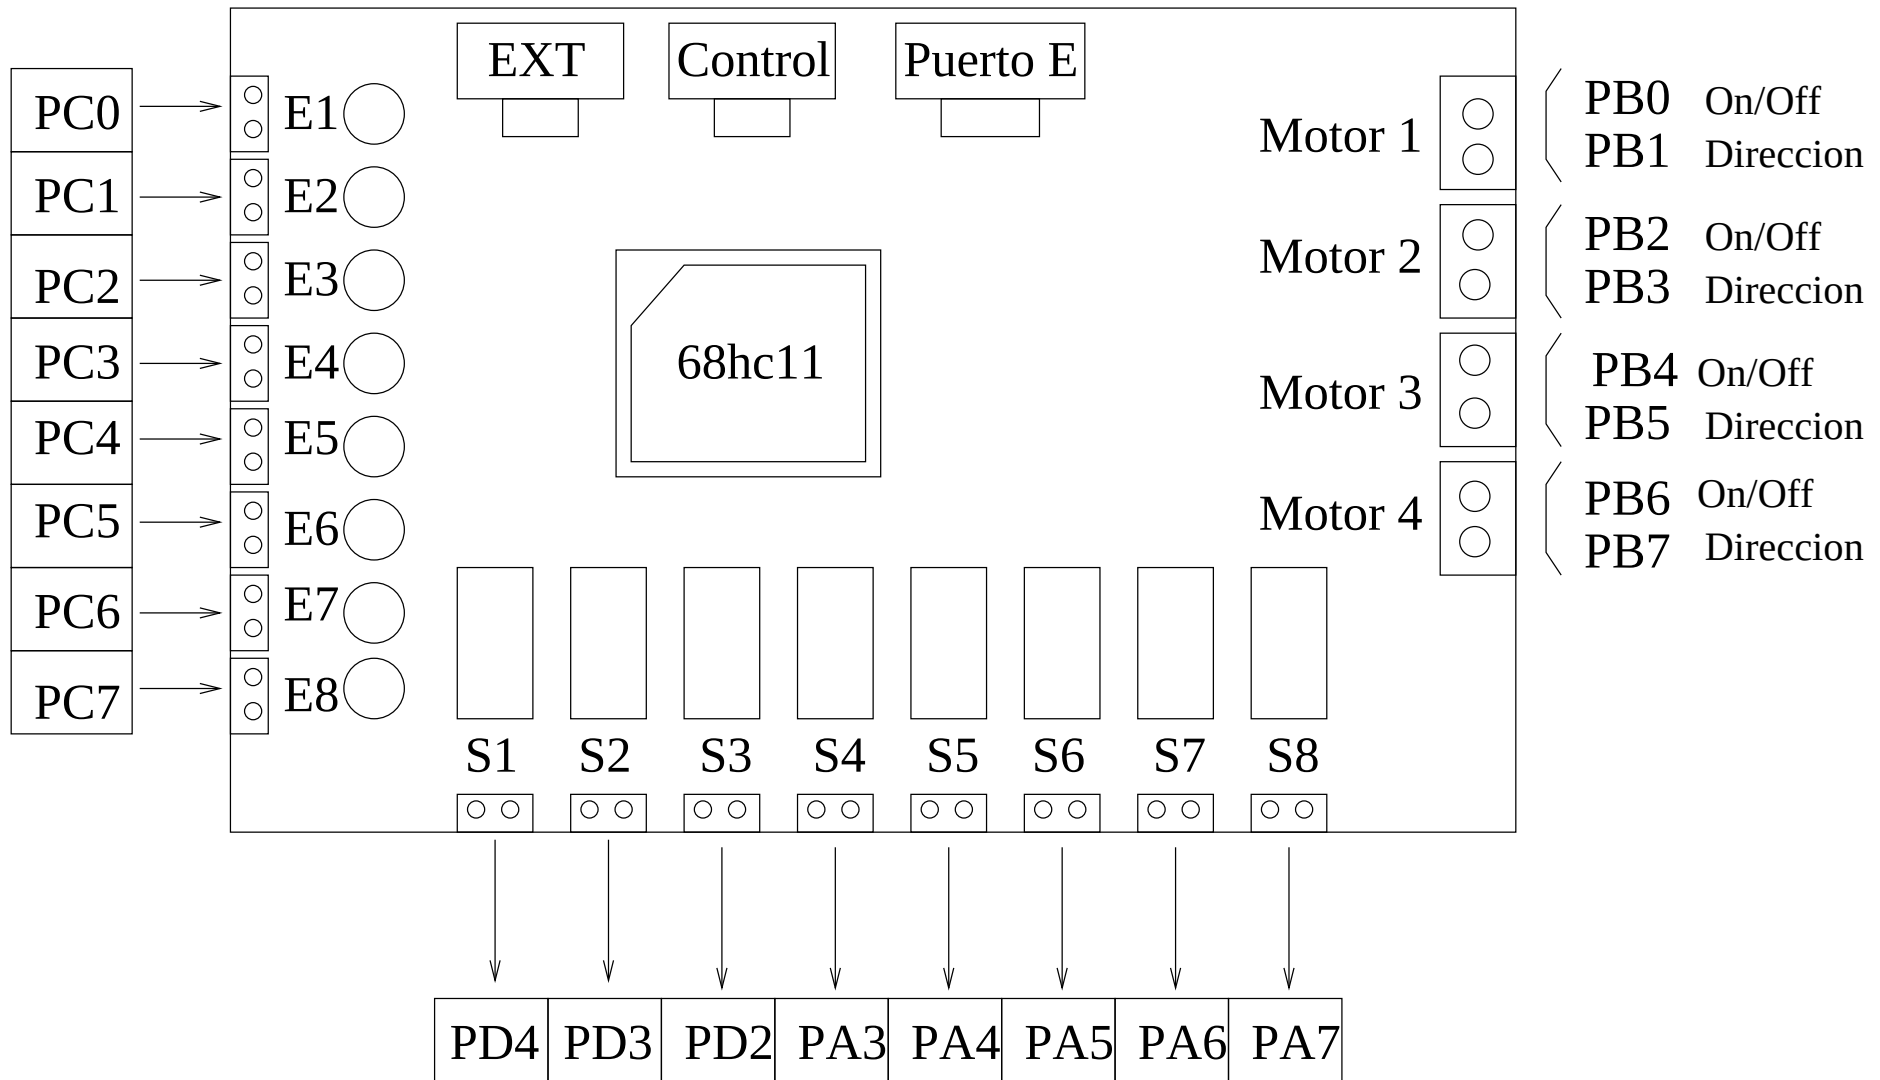

CONTROL

VCC	PA0	E	RW	IRQ
GND	PA1	AS	RESET	XIRQ

PUERTO E

PE4	PE5	PE2	PE3	VRL
PE0	PE1	PE6	PE7	VRH

EXT

PD4	PD5	GND	VCC	PA2
PD3	PD2	S1	S2	S3